
HAVIT



TW969 LITE TRUE WIRELESS STEREO EARBUDS USER MANUAL

Package Content

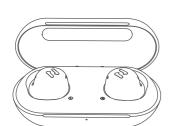

Earbuds * 1 Eartips (size M) * 1

11

Charging Case *1

Type-C Charging Cable *1

¥FF I

Warranty Card *1

IVIT




Eartips * 2



THE MELECULAR GROUNDS

User Manual * 1

Product Overview

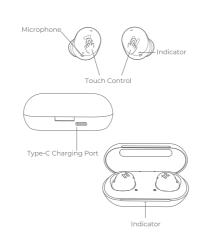


Wearing

Earbuds are fitted with middle size eartips and you can try size S and L if cannot fit well. Please follow the images to wear the earbuds properly.



 Power on / off



Pairing

*Please remove the protective film of earbuds and charge the case fully for the first time usage.

- Turn on the Bluetooth of your device.
 Take out the earbuds from the charging case and the earbuds are in pairing mode while one of the indicator flashes white.
 Select HAVIT TW969 LITE on the list.
 HAVIT TW969 LITE on wis paired with your device and earbud indicator is off.



Touch Control





Previous song
Touch and hold
the left earbud for 1S

Next song
Touch and hold
the right earbud for 1S



Answer/End the call
Tap either earbud twice Reject the call



Reject the can
Touch and hold
either earbud for IS Voice Assistant
Tap the left earbud
3 times

 


Switch on/off Game mode
Tap the right earbud
3 times

*Note: It doesn't support game mode when in mono mode.


Earbuds Charging

Put the earbuds in the case and close the case. The earbuds are charging.



Case Charging


Charge the case with type C charging cable, preferably from any PC or laptop as compared to a USB charger.

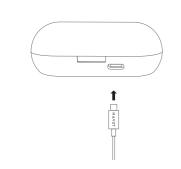

A full charge of the case takes about 1.5 hours.

Reset

 - Take out the earbuds from charging case.
 Tap either earbud 4 times, the earbuds indicator stay solid white for 25 then off. Reset is done.
 Put earbuds back to the case and close the case. Open the case again.
 Turn on Bluetooth of your device and connect
- HAVIT TW969 LITE agai



Ţ

Safety Tips

- Do not expose the earbuds to liquids, moisture or humidity as there are electronics and battery inside battery inside.
- Don't try to disassemble your earbuds . There are no user serviceable parts inside.
- Try not to drop the earbudsand keep them away from sharp objects such as keysin your pockets.
- Clean earbuds tips, metal contact surface of earbuds and case with alcohol cloth regularly to ensure there is no dust accumulation and keep good quality sound experience.
- Charge your earbuds below 5V/1A charger.
- Do not expose the earbuds to extremely high or low temperatureas this may damage the battery oreven deform the plastic parts.
- Listen to the music at high volume is harmful to the ears.
- 10) Don't throw the earbuds in a fire to dispose it otherwise inside battery may explode.

FCC ID: 2AI6I-TW969LITE FCC Warning

FCC STATEMENT This device complies with Part 15 of the FCC Rules. Operation is subject to the following two

(1) This device may not cause harmful interference

and (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

tions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to

radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.
RF warning statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Batteries:

A warning that batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the light.

1) Replacement of a battery with an incorrect type that can defeat a safeguard;
2) Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
3) Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;
4) A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.



Cód. de Homologação 05654-24-12374





